


F32 Brad Nailer Explosive View and Parts list

Issue date:	: 2012. 07. 16
Version no.:	: V1

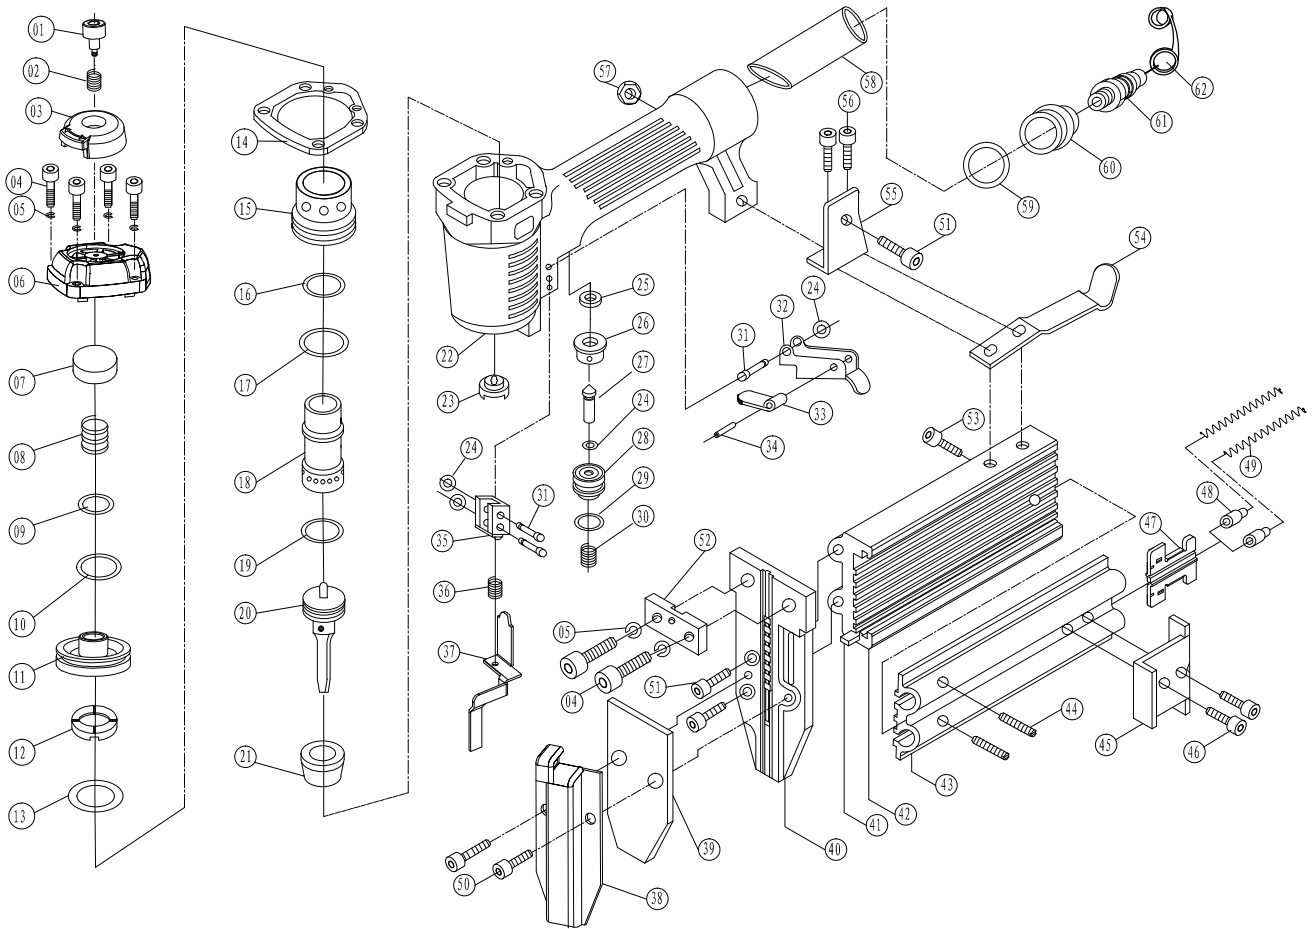

No.	Description	Qty.	No.	Description	Qty.	No.	Description	Qty.	No.	Description	Qty.
01	Bolt	1	20	Main piston	1	39	Cover Board	1	58	Handle sheath	1
02	Reversing Spring	1	21	Bumper	1	40	Driver Guide	1	59	O-ring 36.3*3.55	1
03	Air Reversing cap	1	22	Gun body	1	41	Inlay Slice	1	60	End Cap	1
04	Bolt M5*20	6	23	Rubber washer	1	42	Fixed magazine	3	61	Connector	1
05	Spring washer	6	24	O-ring 1.7*2	4	43	Movable magazine	1	62	Connector protecting jacket	1
06	Cylinder cap	1	25	Rectangle washer	1	44	Bolt M4*10	2			
07	Sealing washer	1	26	Switch knob	1	45	Locating seat	1			
08	Compressed spring	1	27	Trigger pole	1	46	Bolt M4*12	2			
09	O-ring 13.7*2.4	1	28	Valve bush	1	47	Bush	1			
10	O-ring 31.2*2.5	1	29	O-ring 11.2*2	1	48	Bush pole	2			
11	Head valve piston	1	30	Compressed Spring	1	49	Bush compressed Spring	2			
12	Buffer gasket	1	31	Trigger Pin	3	50	Bolt M4*10	2			
13	Oring 24.8X3.5	1	32	Trigger	1	51	Bolt M4*14	3			
14	Sealing washer	1	33	Safety spacer	1	52	Plate	1			
15	Collar	1	34	Pin 2.5*16	1	53	Bolt M4*16	1			
16	O-ring 41.7*3	1	35	Slide plate frame	1	54	Locating stem	1			
17	O-ring 26.2*2.4	1	36	Spring	1	55	Fixed seat	1			
18	Cylinder	1	37	Safety Stand	1	56	Bolt	2			
19	O-ring 21*3	1	38	Safety cap	1	57	Nut M4	1			