


F9140 Air Stapler Explosive View and Parts list

Issue date:	2012. 07. 11
Version no.:	V1

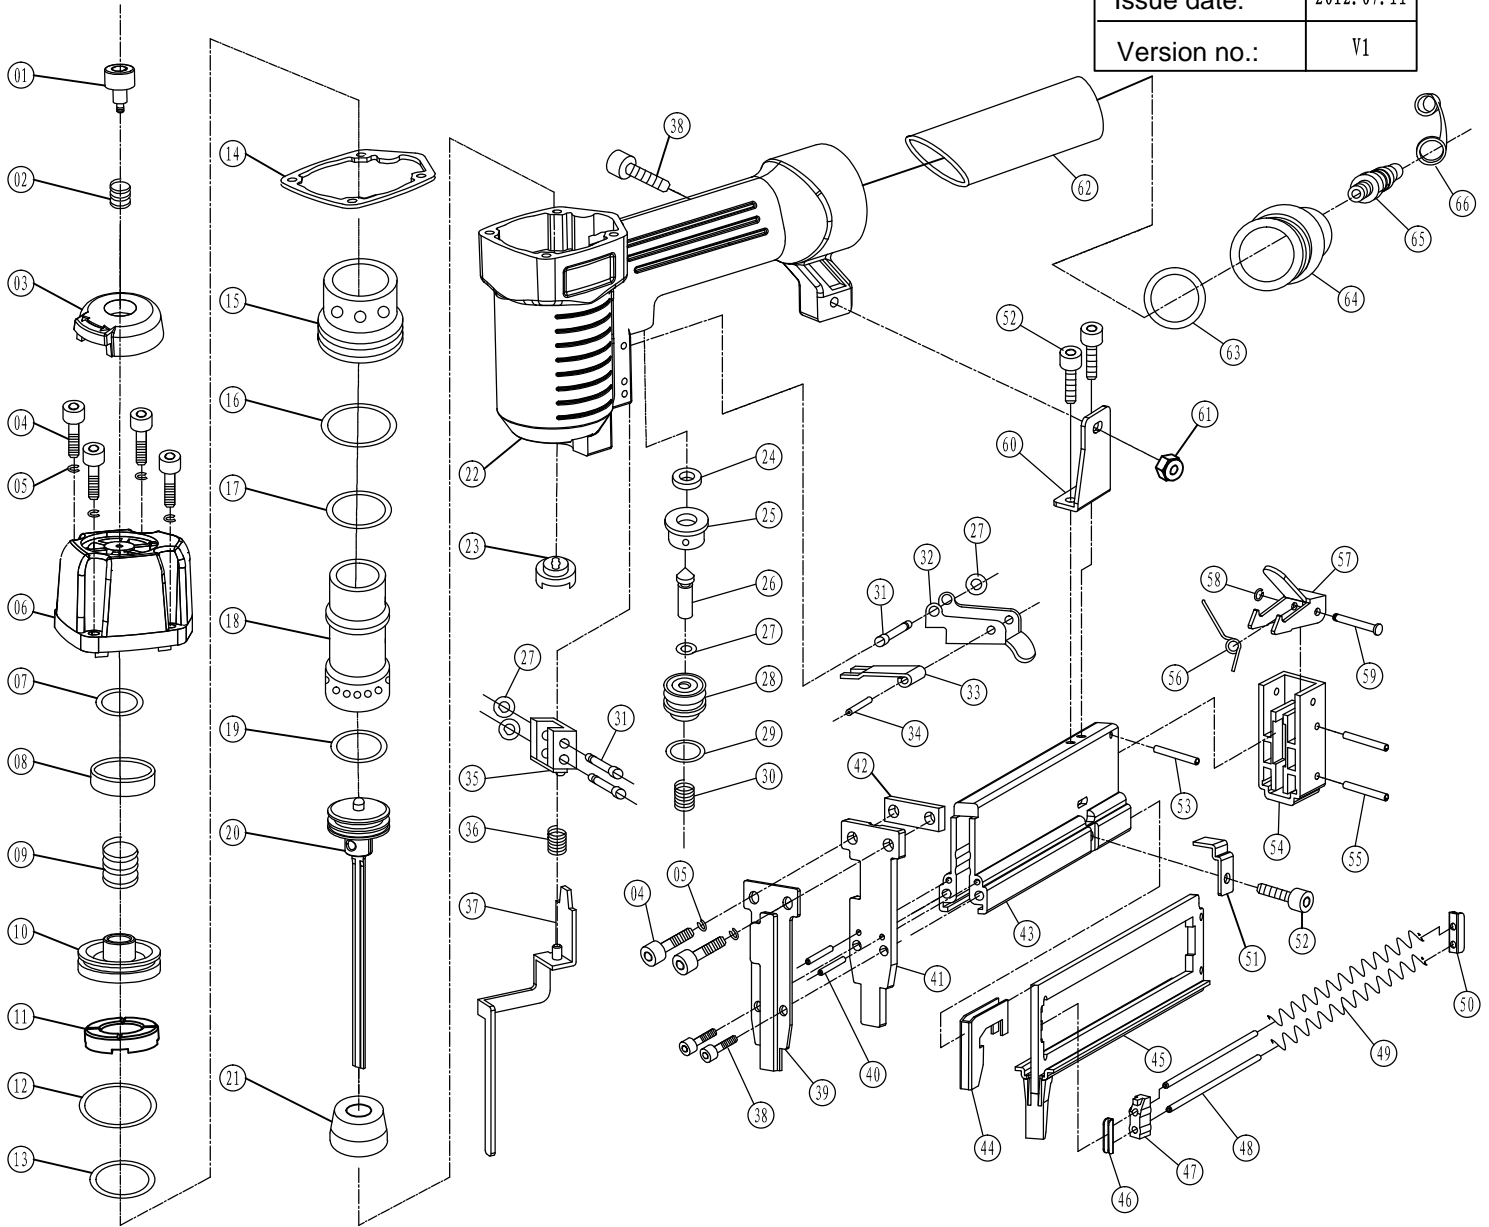

No.	Description	Qty.	No.	Description	Qty.	No.	Description	Qty.	No.	Description	Qty.
01	Bolt	1	18	Cylinder	1	35	Safety Stand	1	52	Bolt M4*8	3
02	Compressed spring	1	19	O ring 21*3	1	36	Pusher spring	1	53	Pin 3*18	1
03	Air deflector	1	20	Piston assembly	1	37	Safety stand	1	54	Locating seat	1
04	Bolt M5*20	6	21	Bumper	1	38	Bolt M4*14	3	55	Pin 3*22	2
05	Spring washer	6	22	Gun body	1	39	Nose cover	1	56	Torsional spring	1
06	Cylinder cover	1	23	Rubber washer	1	40	Pin 2.5*10	2	57	Latch	1
07	O ring 13.7*2.4	1	24	Rectangle Washer 12.9*7*1.8	1	41	Driver guide	1	58	Snap retainer	1
08	Sealing washer	1	25	Trigger Valve Seat	1	42	baffle	1	59	Pin	1
09	Compressed spring	1	26	Trigger Valve Stem	1	43	Fixed magazine	1	60	Fixed seat	1
10	Switch valve piston	1	27	O ring 1.7*2	4	44	Pusher	1	61	Nut M4	1
11	Bumper washer	1	28	Trigger Valve Guide	1	45	Movable magazine	1	62	Rubber handle case	1
12	O ring 31.2*2.5	1	29	O ring 11.2*2	1	46	Locating plate I	1	63	O ring 36.3*3.55	1
13	O ring 24.8*3.5	1	30	Compressed Spring	1	47	Guide Block	1	64	End cap	1
14	Sealing washer	1	31	Step pin	3	48	Pusher pipe	2	65	Air Inlet plug	1
15	Collar	1	32	Trigger	1	49	Spring	2	66	Air Inlet plug case	1
16	O ring 42.5*2.5	1	33	Safety spacer	1	50	Locating plate II	1			
17	O ring 30*1.8	1	34	Pin 2.5*16	1	51	Limit piece	1			