


# Детализировка и лист запасных частей FROSP AF-6434

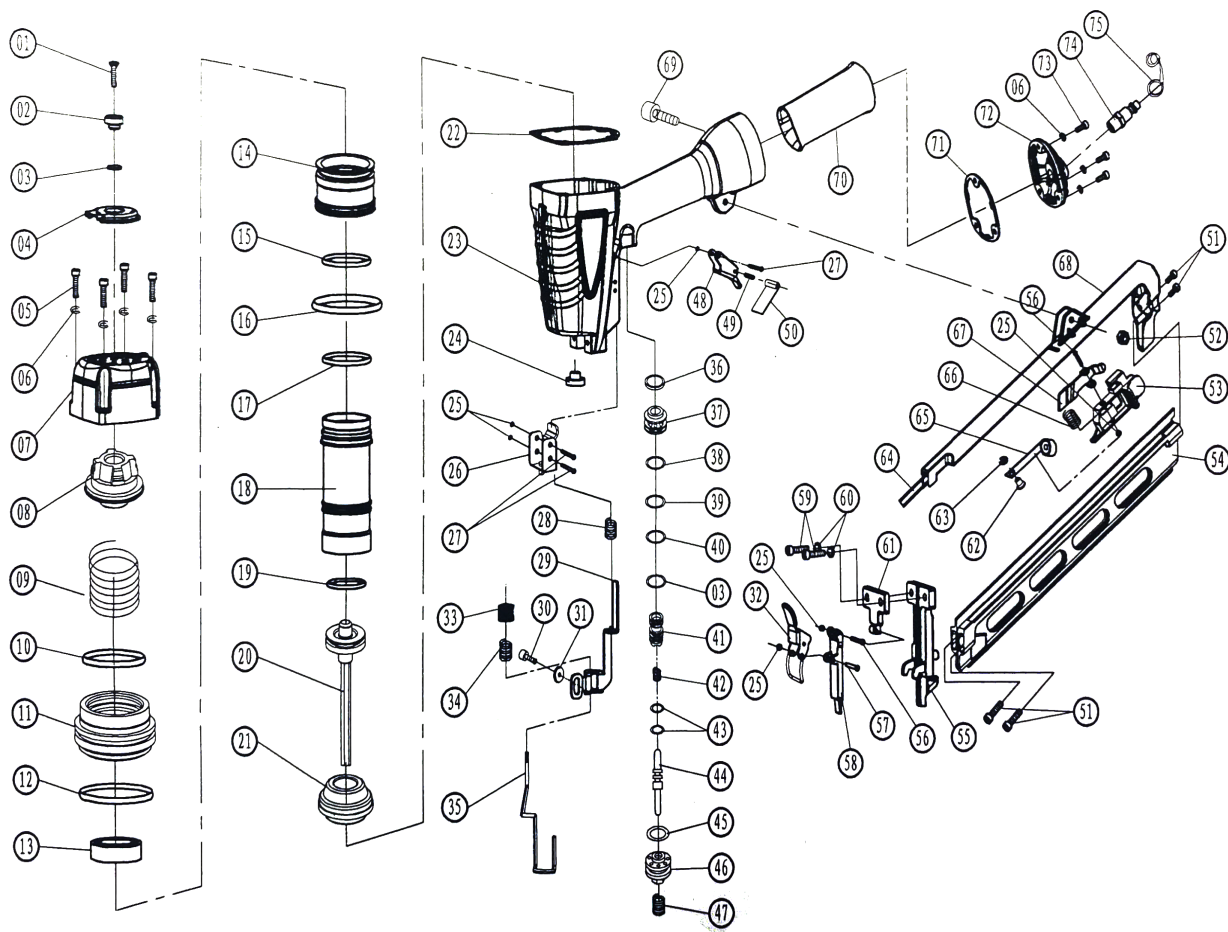

TIEM NO.	PART NAME	Qty	TIEM NO.	PART NAME	Qty
1	Hexagon socket head screw M5*16	1	38	O-ring 16*1.6	1
2	Bushing	1	39	O-ring 6.1*1.8	1
3	O-ring 9*1.8	2	40	O-ring 6.4*2	1
4	Exhaust cover	1	41	Valve sleeve	1
5	Hexagon socket head screw M5*25	4	42	Switch spring	1
6	Spring washer 5	7	43	O-ring 2.4*1.6	2
7	Cylinder cover	1	44	Switch lever	1
8	On-off valve spring seat	1	45	O-ring 18*2.65	1
9	On-off valve compression spring	1	46	Switch seat	1
10	O-ring 38.7*2.65	2	47	Trigger compression spring	1
11	On-off valve	1	48	Trigger	1
12	O-ring 48.7*2.65	1	49	Pin 3*16	1
13	Cylinder seal	1	50	Safety bezel	1
14	Tight ring	1	51	Hexagon socket head screw M4*14	4
15	O-ring 45*2.65	1	52	Hex lock nut M5	1
16	O-ring 63*2.65	1	53	Head seat	1
17	O-ring 45*3.55	1	54	Guide pin slot	1
18	Cylinder	1	55	Nail head	1
19	O-ring 34.6*3.55	1	56	Limit pin	2
20	Piston assembly	1	57	Shaft pin	1
21	Bumper	1	58	Movable cover	1
22	End cap gasket	1	59	Hexagon socket head screw M6*25	2
23	Gun body	1	60	Spring washer 6	2
24	Guide gasket	1	61	Fixed cover	1
25	O-ring 1.7*2	6	62	Spring Pin	1
26	Guide seat	1	63	Split ring 3	1
27	Trigger pin	3	64	Guide bar	1
28	Safety frame compression spring	1	65	Coil Spring II	1
29	Fuse holder assembly	1	66	Compression spring	1
30	Hexagon socket head cap screws M4*8	1	67	Head	1
31	Fuse holder guide sleeve	1	68	Guide pin cover	1
32	Tension trigger assembly	1	69	Hexagon socket head screw M5*22	1
33	Adjusting Nut	1	70	Sheath	1
34	Safety frame compression spring	1	71	Cylinder head gasket	1
35	Fuse	1	72	End cap	1
36	Switch seat sealing ring	1	73	Hexagon socket head screw M5*20	3
37	Seat	1	74	Connector	1
			75	Connector cover	1