


Детализировка и лист запасных частей Пнеумогайковерт FROSP ПГ-115

EXPLOSIVE VIEW

AIR IMPACT WRENCH 118

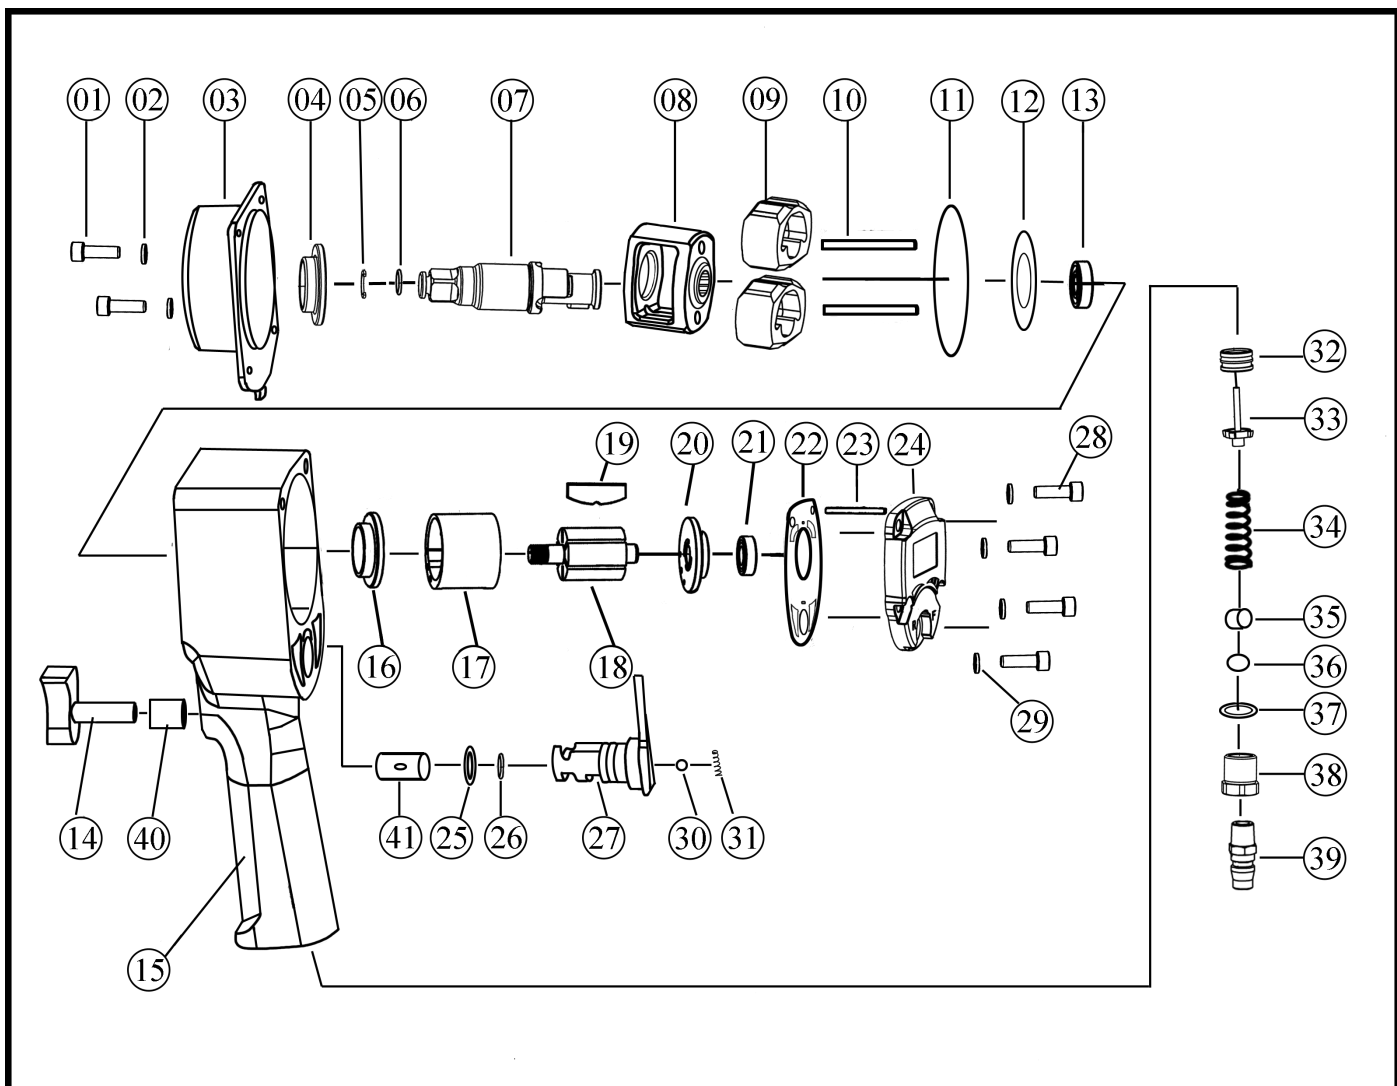

PARTS LIST

No.	Part name	QTY	No.	Part name	QTY	No.	Part name	QTY	No.	Part name	QTY
1	Screw	4	11	O-ring	1	21	Ball bearing	1	31	Spring	1
2	Screw washer	4	12	Spacer	1	22	Motor case gasket	1	32	Inlet valve seat	1
3	Impact housing	1	13	Ball bearing	1	23	Pin	1	33	Valve stem	1
4	Thrust plate	1	14	Trigger	1	24	Rear cover	1	34	Spring	1
5	O-ring	1	15	Motor case	1	25	O-ring	1	35	Plate gasket	1
6	Retainer ring	1	16	Front plate	1	26	Rand	1	36	Gasket	1
7	Anvil	1	17	Cylinder	1	27	Throttle lever	1	37	O-ring	1
8	Hammer cage	1	18	Rotor	1	28	Screw	4	38	Air inlet	1
9	Hammer dog	2	19	Rotor blade	6	29	Screw washer	4	39	Connector	1
10	Hammer pin	2	20	Rear plate	1	30	Steel ball	1	40	Trigger sleeve	1
Parts Assembly Drawing									41	Trigger sleeve	1