


# Детализировка и лист запасных частей FROSP R9905

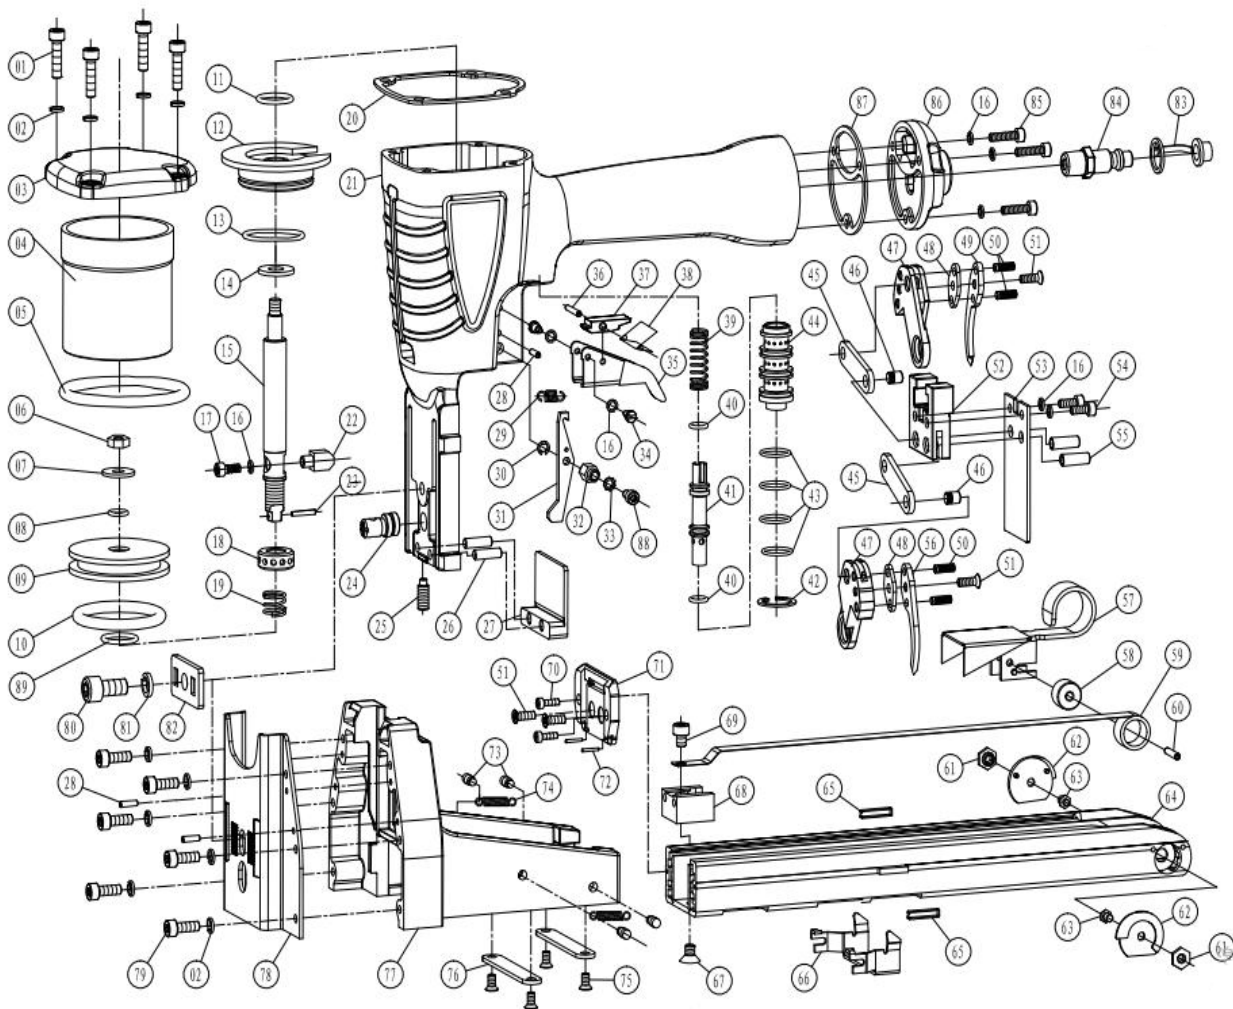

TIEM NO.	PART NAME	Qty	TIEM NO.	PART NAME	Qty
1	Hexagon socket head screw M5*20	4	43	O-ring 14.5*1.5	4
2	Spring Washer 5	10	44	valve seat	1
3	cylinder cover	1	45	connector	2
4	cylinder	1	46	pin B	2
5	O-ring 60*2.65	1	47	Left-right rocker arm	2
6	Type I hexagon nut M6	1	48	Corner knife gasket	2
7	O-ring 6.4*18*1.6	1	49	Left corner knife	1
8	O-ring 8*1.8	1	50	pin A	4
9	piston	1	51	Hex bolt M4*12	4
10	O-ring 46.5*5.8	1	52	connecting base	1
11	O-ring 13.2*2.65	1	53	Firing pin	1
12	Divider sleeve	1	54	Hex bolt M4*10	2
13	O-ring 36.5*2.65	1	55	pin 6*16	2
14	O-ring 8.4*24*2	1	56	Right corner knife	1
15	push rod	1	57	Head assembly	1
16	Spring Washer	8	58	Coiling core	1
17	Hex bolt M4*12	1	59	coil spring	1
18	adjusting screw nut	1	60	pin 4*16	1
19	Anti-loosening spring	1	61	nut	2
20	gasket	1	62	Guide piece assembly	2
21	gun body	1	63	set screw piston pin	2
22	Stroke control block	1	64	clip	1
23	pin 2.5*14	1	65	spring clip	2
24	eccentric shaft	1	66	Clip retaining buckle	1
25	Hex bolt M6*16	1	67	Hex bolt M5*10	1
26	pin	2	68	Coiling spring retaining block	1
27	support plate	1	69	Hex bolt M5*6	1
28	pin 3*10	3	70	Hex bolt M3*10	2
29	tension spring	1	71	nailhead	1
30	Open stop ring 3.5	1	72	pin 1.5*10	2
31	Switch plate	1	73	Spring post	4
32	distance bush	1	74	Hex bolt M4*8	4
33	lock washer		75	Mounting seat connection piece	2
34	Trigger screw	2	76	Magazine mounting seat	1
35	Trigger assembly	1	77	cover plate	1
36	pin 3*18	1	78	Hex bolt M5*14	6
37	safety shield	1	79	Hex bolt M8*16	1
38	Trigger torsion spring	1	80	spring washer	1
39	Hook Switch	1	81	Regulating plate	1
40	O-ring 7.1*1.8	2	82	Protective sleeve for pipe joint	1
41	switch lever	1	83	pipe joint	1
42	circlip for hole	1	84	Hex bolt M4*16	3
			85	end cap	1
			86	shim end cover	1
			87	O-ring 6.1*1.8	1