


# Деталировка и лист запасных частей к гайковерту FROSP ПГ-126К

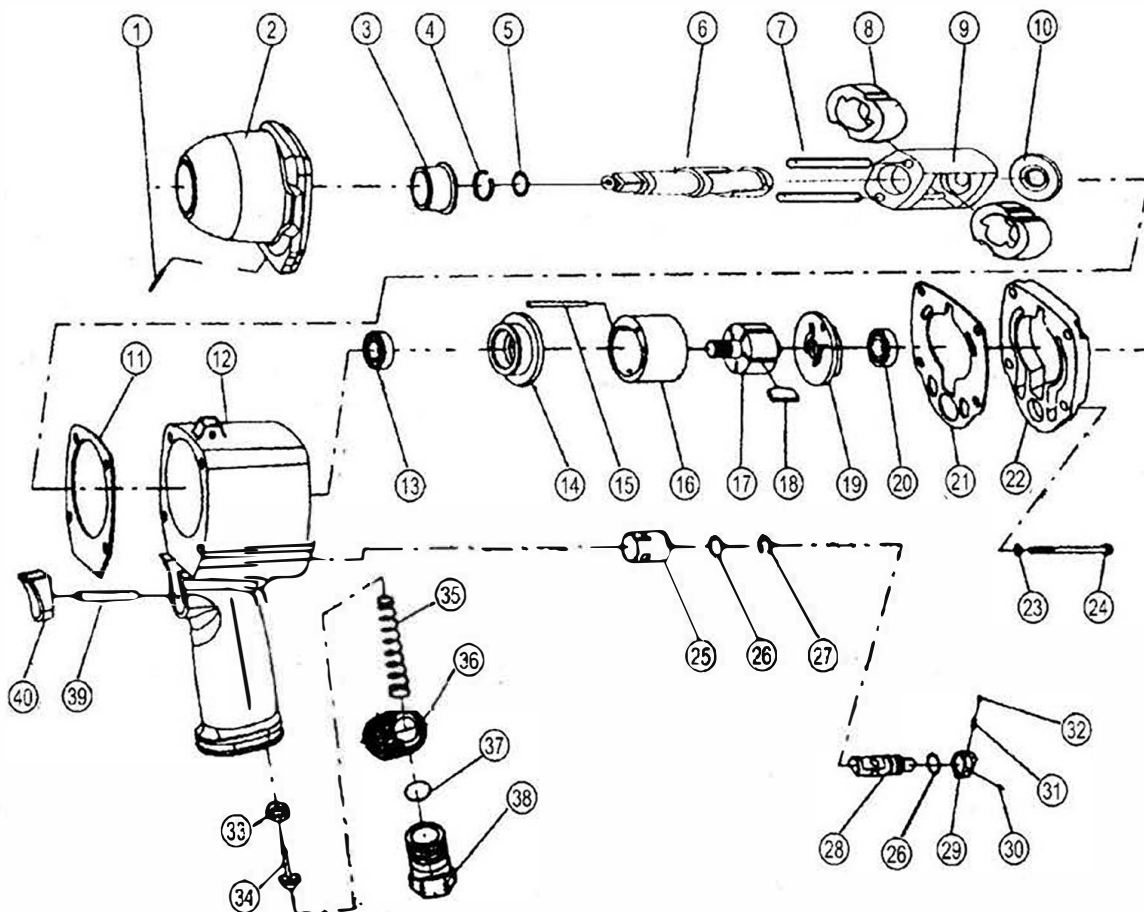

Part No.	Description	Amt.	Part No.	Description	Amt.
1	The spring sold	1	21	The paper pad of rear cover	1
2	Former cover	1	22	Back cover	1
3	shaft housing	1	23	Spring washer	8
4	Iron axle spring circle	1	24	6 angle screws	8
5	Sealed circle	1	25	Angry valve cover	1
6	Impact rod	1	26	Sealed cover	2
7	Ø6.3 sold	2	27	Spring circle	1
8	Impact a piece	2	28	The straight valve of worse turning	1
9	Impact frame	1	29	Knob	1
10	Impact frame is situated between to stop	1	30	The spring sold	1
11	Former cover paper pad	1	31	Bellows	1
12	Noumenonn	1	32	Steel ball	1
13	Bearing	1	33	Close the circle of air cushion	1
14	Frontboard	1	34	Enter angry valve rod	1
15	Cylindersold	1	35	Enter angry spring	1
16	Aircylinder	1	36	Exhaust and cover	1
17	Rotor	1	37	Sealed circle	1
18	Vane	6	38	In charge of connecting	1
19	Back-end board	1	39	Sell into pneumatic jack	1
20	Bearing	1	40	Trigger	1