


# Детализировка и лист запасных частей Meite SC7E RC

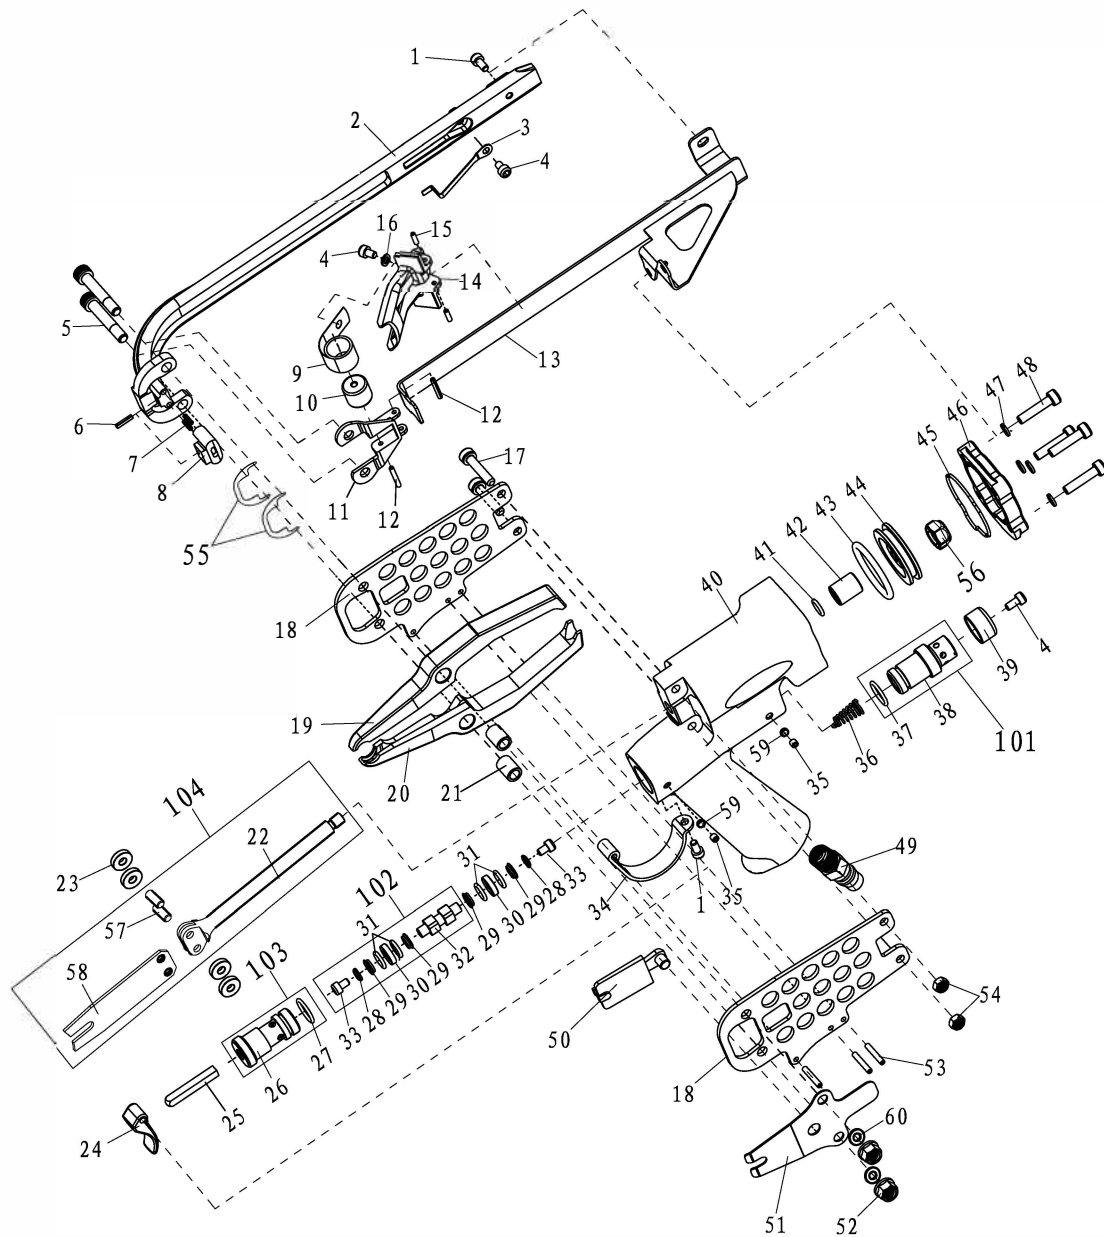

ITEM NO.	PART NO.	PART NAME	Q' TY	ITEM NO.	PART NO.	PART NAME	Q' TY
1	B01-01-040080-02	SCREW	2	34	AA58A-025A	TRIGGER GUARD	1
2	AA58A-017A	MAGAZINE	1	35	B01-04-040040-02	SCREW	2
3	AA58A-022A	CLIP	1	36	AA58A-003A	SPRING	1
4	B01-01-040060-02	SCREW	3	37	B08-013000180	O-RING	1
5	AA58A-014A	SCREW	2	38	AA58A-029A	REAR VALVE	1
6	B02-025110-02	ROLL PIN	1	39	AA58A-035A	REAR VALVE COVER	1
7	AA58A-027A	SPRING	2	40	AA58A-001A	BODY	1
8	AA58A-026A	MAGAZINE SHOE	1	41	B08-007650180	O-RING	1
9	AA58A-021A	WINDING SPRING	1	42	AA58A-002A	SLEEVE	1
10	AA58A-005A	ROLLER	1	43	B08-032000350	O-RING	1
11	AA58A-018A	BRACKET	1	44	AA58A-024A	PISTON	1
12	B02-025170-02	ROLL PIN	2	45	B08-040000150	O-RING	1
13	AA58A-Y09A1	MAGAZINE RAIL	1	46	AA58A-023A	CYLINDER CAP	1
14	AA58A-028A	PUSHER	1	47	B04-01-050-02	SPRING WASHER	4
15	B02-025100-02	ROLL PIN	2	48	B01-01-050220-02	SCREW	4
16	B04-01-040-02	SPRING WASHER	1	49	AA06A-018A	AIR HOSE CONNECTOR	1
17	B01-01-050250-02	SCREW	2	50	AA58A-013A	NAIL STOP	1
18	AA58A-010A	ORIENTATION PLATE	2	51	AA58A-012A	SHRAPNEL	1
19	AA58A-015A	JAW I	1	52	B07-04-060-04	LOCKNUT	2
20	AA58A-016A	JAW II	1	53	B02-030180-02	ROLL PIN	3
21	AA58A-011A	SLEEVE	2	54	B07-04-050-04	LOCKNUT	2
22	AA58A-009A	MAIN FIRING PIN	1	55	AA58A-037A	SHIM	2
23	AA58A-007A	ROLLER	4	56	AA58A-038A	LOCKNUT	1
24	AA58A-006A	TRIGGER	1	57	AA58A-004A	COLUMN PIN	2
25	AA58A-036A	THIMBLE	1	58	AA58A-008A	FIRING PIN	1
26	AA58A-030A	FRONT VALVE	1	59	AA58A-039A	PASTERN SHIM	2
27	B08-013000180	O-RING	1	60	B04-02-060-02	FLAT WASHER	2
28	AA58A-034A	SHIM	2				
29	AA58A-032A	SUPPORT	4	101	AA58A-Y07A1	REAR VALVE SET	
30	AA58A-031A	VALVE	2	102	AA58A-Y05A1	VALVE SET	
31	B08-008000180	O-RING	4	103	AA58A-Y06A1	FRONT VALVE SET	
32	AA58A-033A	SPACER	1	104	AA58A-Y02A1	DRIVER	
33	B01-01-040060-02	SCREW	2				