


Детализировка FROSP GJH95

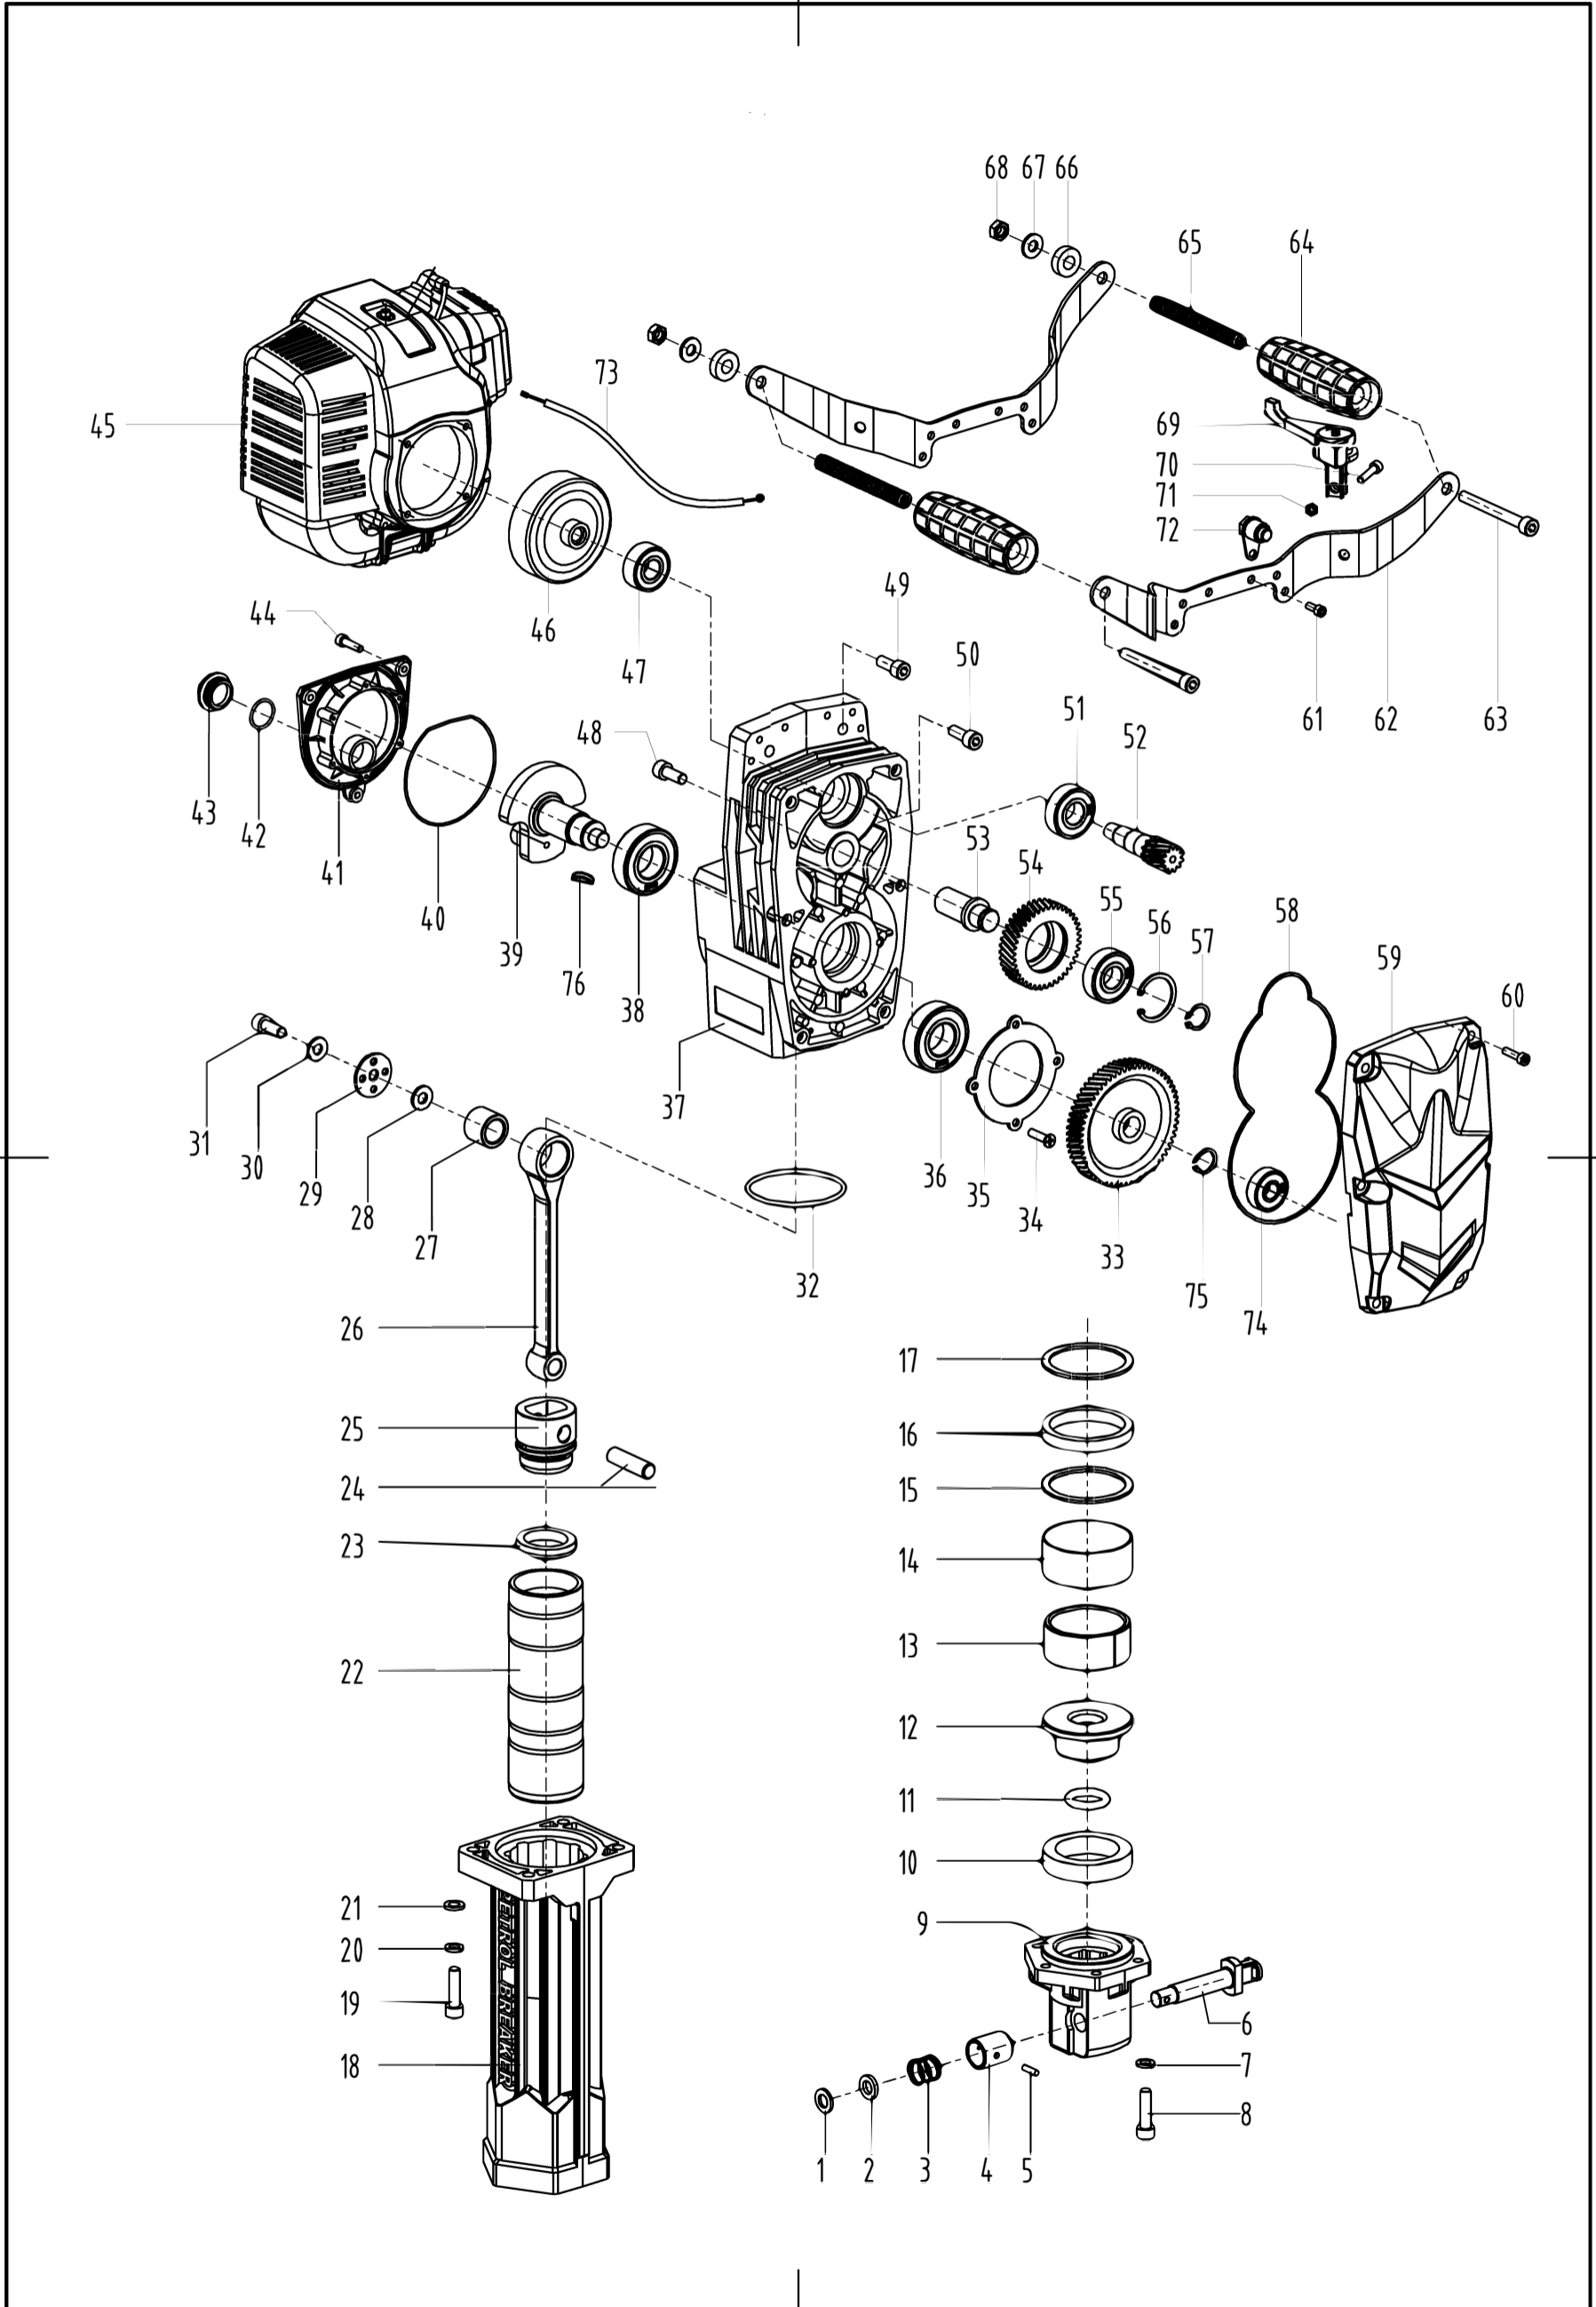

Лист запасных частей FROSP GJH95

1	Washer	1	40	Oil bowl seal ring	1
2	Washer	1	41	Bowl	1
3	Spring	1	42	Φ23.5XΦ2.5 Oil hole seal ring	1
4	Lock sleeve	1	43	Oil hole	1
5	4X18pin	1	44	M5X14 head screw	3
6	Lock rod	1	45	Gasoline engine	1
7	\$ 8 spring washer	6	46	Passive power transfer disk	1
8	M8X35screw	6	47	62202 bearing	1
9	Iron head	1	48	M8X25screw	1
10	Damplng ring	1	49	M8X20screw	2
11	23.5X5.2seal ring	1	50	M8X16screw	2
12	Shank sleeve	1	51	6203 bearing	1
13	Mouse	1	52	Small Gear with shaft	1
14	Mouse cover	1	53	Bearing holder	1
15	Mouse washer	1	54	Gear	1
16	Damper	1	55	6203 bearing	1
17	Mouse washer	1	56	Φ40 jumping ring	1
18	Cylinder case	1	57	Φ17 jumping ring	1
19	M8X40screw	4	58	Ring	1
20	Φ8 spring washer	4	59	Top cover	1
21	Φ8 flat washer	4	60	M6X30screw	6
22	Cylinder	1		Φ6 spring washer	6
23	Piston ring	1		Φ6 flat washer	6
24	12X44piston pin	1	61	M6X25screw	6
25	Piston	1	62	Handle spindle	2
26	Connecting rod	1	63	M8X30 screw	2
27	NK18/20 needle bearing	1	64	Rubber handle	2
28	Φ8 flat washer	1	65	12X100spring	2
29	Eccentric shaft cover	1	66	Rubber washer	2
30	Φ8 flat washer	1	67	Φ8flat washer	2
31	M8X25screw	1	68	M8screw	2
32	O ring	1	69	Throttle switch	1
33	Big Gear	1	70	M5X12screw	1
34	M5X16screw	4	71	M5screw	1
35	Bearing pleasure plate	1	72	Flameout switch	1
36	6205bearing	1	73	Power wire	1
37	Gear box	1	74	6201bearing	1
38	6205bearing	1	75	Φ22 shaft card	1
39	Eccentric shaft	1	76	4X16 half round key	2