


Детализировка и лист запасных частей к гайковерту FROSP ПГ-116

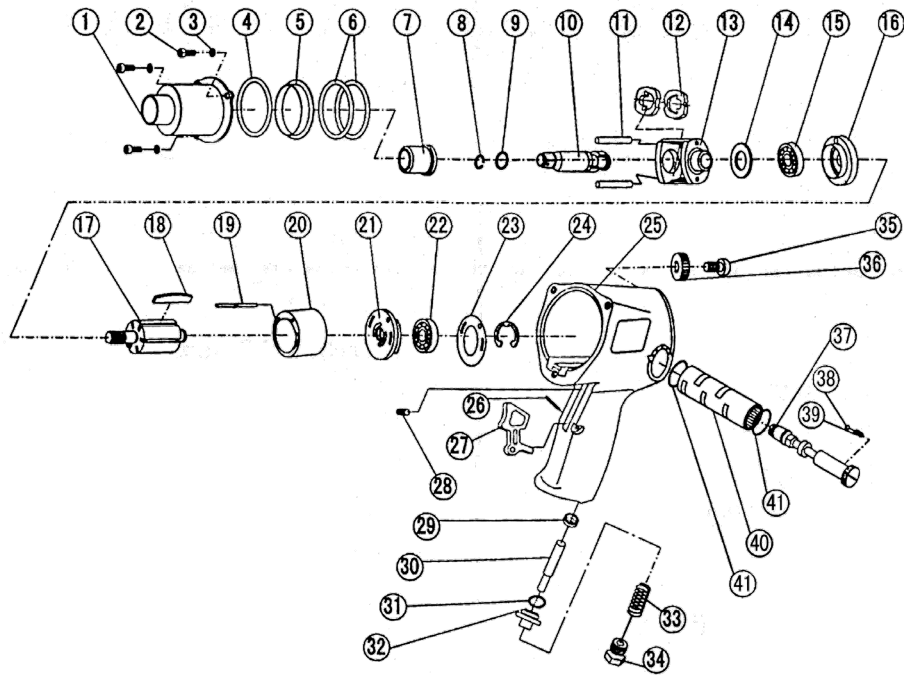

Pos	Description	Q'ty	Pos	Description	Q'ty
1	Hammer case assembly	1	22	Ball bearing	1
2	Screw	3	23	Rear end plate gasket	1
3	Spring washer	3	24	Rotor bearing retainer	1
4	Hammer case gasket	1	25	Housing incl.part37,41	1
5	Hammer case pilot	1	26	Spring pin	1
6	Motor clamp washer	2	27	Trigger	1
7	Bushing	1	28	Set screw	1
8	Reainer ring	1	29	Throttle valve seat	1
9	O-ring	1	30	Vavle stem	1
10	Anvil	1	31	O-ring	1
11	Hammer pin	2	32	Air valve	1
12	Hammer	2	33	Spring	1
13	Hmmer frame	1	34	Air inlet	1
14	Rear washer	1	35	Reverse valve knob screw	1
15	Ball bearing	1	36	Reverse valve knob	1
16	Front end plate	1	37	Reverse valve	1
17	Rotor	1	38	Steel ball	1
18	Rotor blade	6	39	Spring	1
19	Lock pin	1	40	Reverse valve bushing	1
20	Cylinder	1	41	O-ring	2
21	Rear end plate	1			