


# Лист запасных частей AF-9021

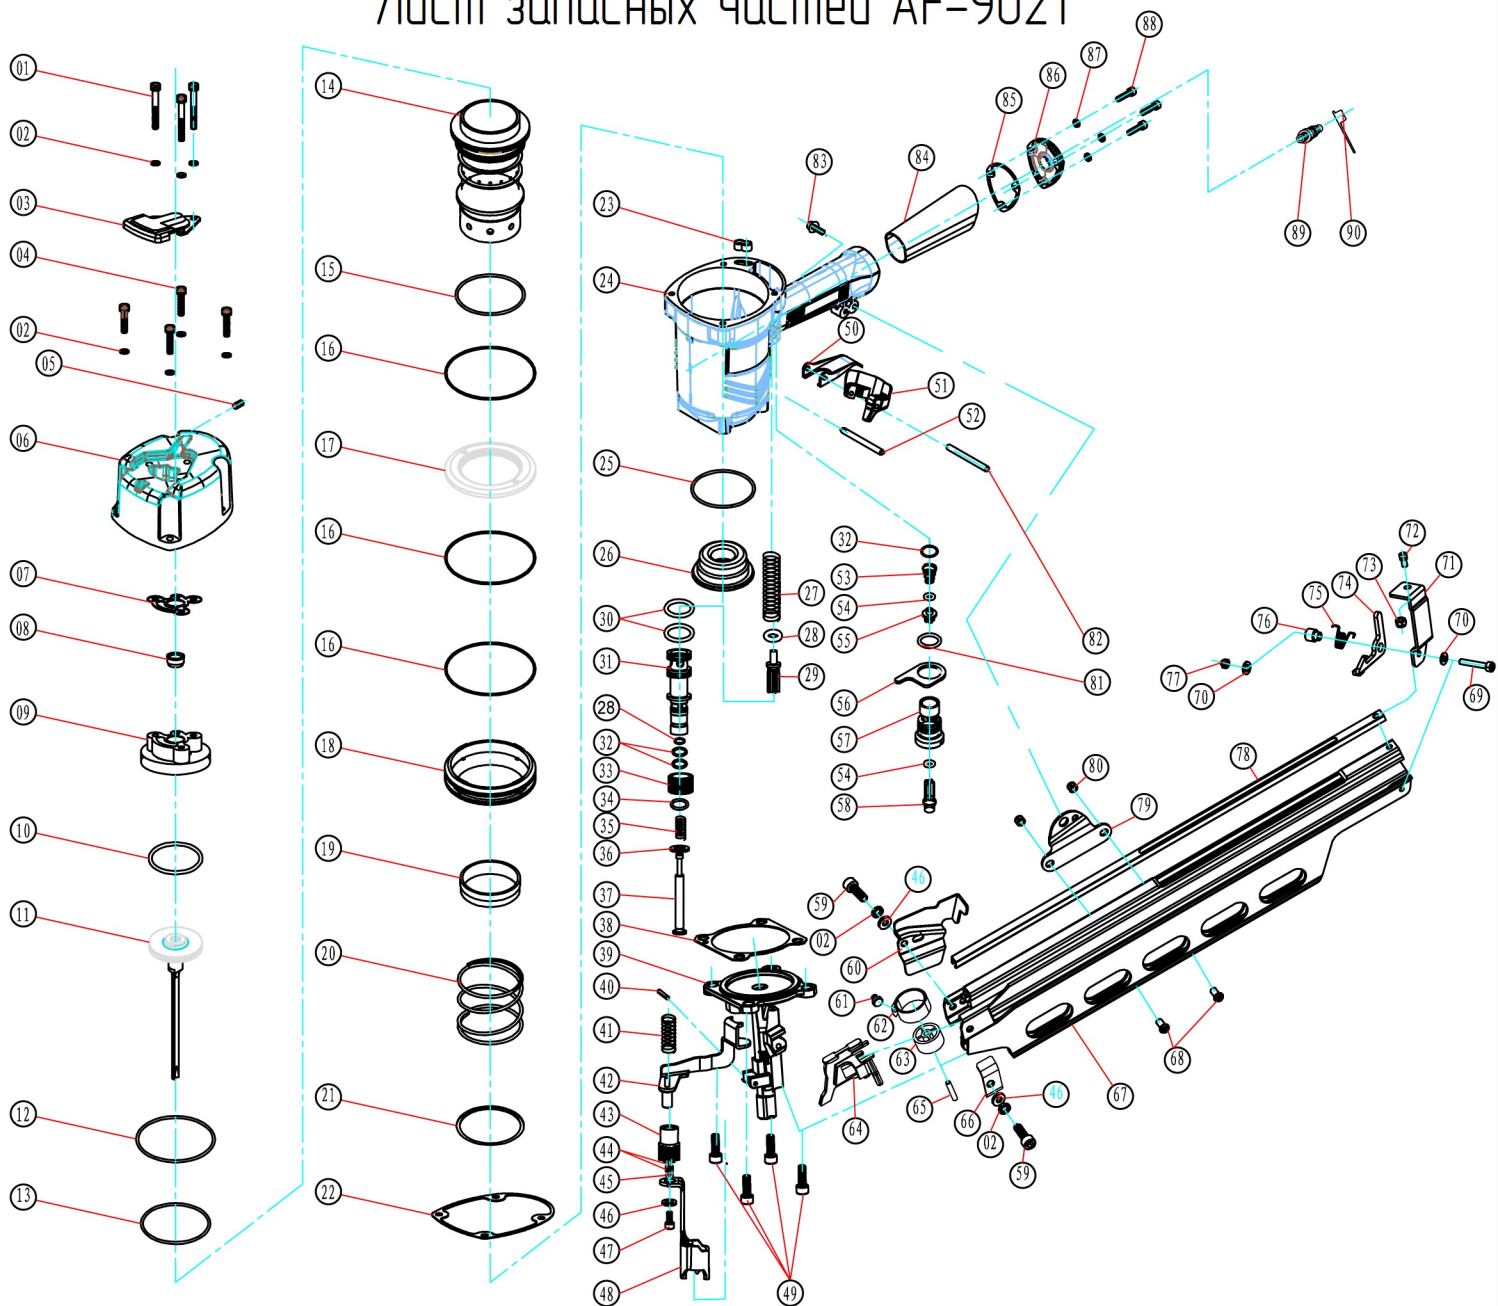

No.	Description	Qty.	No.	Description	Qty.	No.	Description	Qty.	No.	Description	Qty.
01	Hex bolt M6X45	3	24	Gun body	1	47	Bolt M6*10	1	70	Flat washer 4	2
02	Spring washer 6	9	25	O-ring	1	48	Safety nose	1	71	Baffle	1
03	Air Deflector	1	26	Bumper	1	49	Bolt M8*20	4	72	Bolt M5*10	1
04	Hex bolt M6X25	4	27	Compressed spring	1	50	Trigger	1	73	Nut	1
05	Hex bolt M4X4	1	28	O-ring 4.5X1.8	2	51	Safety seat	1	74	Latch	1
06	Cylinder cover	1	29	Pusher	1	52	Pin 3*30	1	75	Latch spring	1
07	Head valve washer	1	30	O-ring 10*2	2	53	Spring	1	76	Pin sleeve	1
08	Sealing plug	1	31	Valve pole	1	54	O-ring 7 x 1.9	2	77	Nut M4	1
09	Head valve	1	32	O-ring (9X1.8)	3	55	Pusher	1	78	Nail guide bar	1
10	O-ring 50X3.55	1	33	Valve pole Sleeve	1	56	Fixed piece	1	79	Fixed seat	1
11	Main piston	1	34	O-ring (6.1 X1.8)	1	57	Switch seat	1	80	Nut M6	2
12	O-ring 79.3x2.5	1	35	Compressed spring	1	58	Switch pole	1	81	O-ring 11.2*1.85	
13	O-ring 69.3x2.5	1	36	Flat washer 5	1	59	Bolt M6*18	2	82	Pin	1
14	Cylinder	1	37	Pusher pin	1	60	Fixed block	1	83	Bolt M8*16	1
15	O-ring 62.8X2.65	1	38	Gasket	1	61	Locating pin	1	84	Handle sleeve	1
16	O-ring 95 x2.5	3	39	Dirve guide	1	62	Scroll spring	1	85	End cap washer	1
17	Upper collar	1	40	Pin	2	63	Spring core	1	86	End cap	1
18	Nether collar	1	41	Compressed spring	1	64	Pusher assembly	1	87	Spring washer 5	3
19	Sealing washer	1	42	Safety yoke assembly	1	65	Pin 4*25	1	88	Bolt M5*18	3
20	Compressed spring	1	43	Adjust nut	1	66	Protector block	1	89	Air coupler	1
21	Spring washer	1	44	Compressed spring	2	67	Aluminum magazine	1	90	Coupler plug	1
22	Washer	1	45	Steel ball	2	68	Bolt M6*12	2			
23	Sealing washer	1	46	Flat washer 6	3	69	Bolt M4*25	1			