


Детализировка и лист запасных частей к гайковерту FROSP ПГ-218

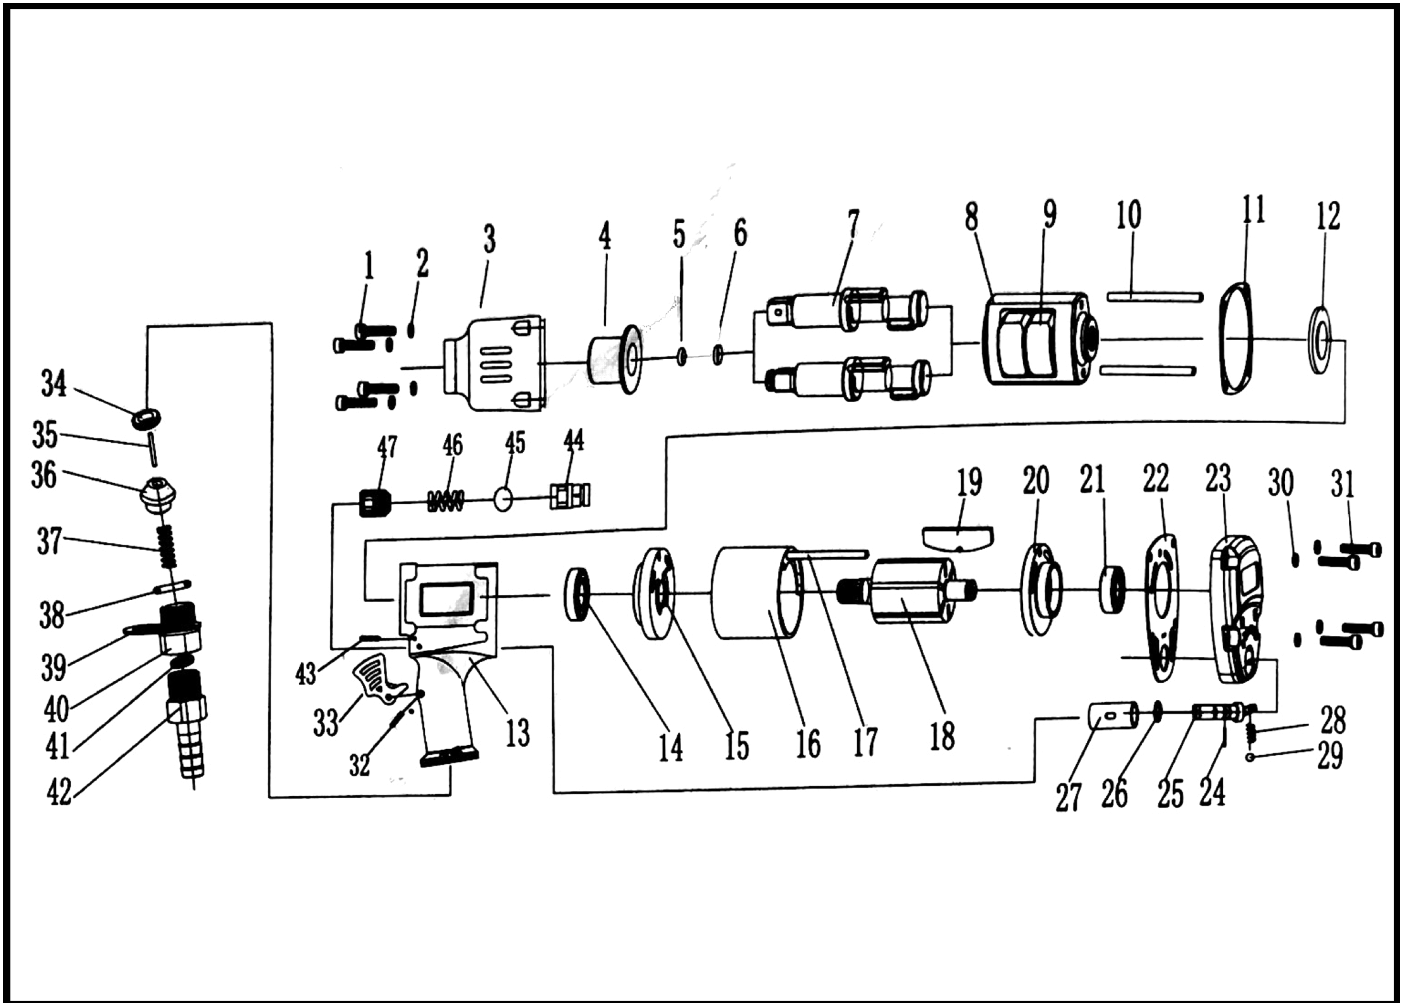

No.	Part name	QTY	No.	Part name	QTY	No.	Part name	QTY	No.	Part name	QTY
1	Screw	4	13	Housing	1	25	Knob	1	37	Iron ball	1
2	Spring washer	4	14	Front bearing	1	26	O-ring	1	38	O-ring	1
3	Front cover	1	15	Front end plate	1	27	Reverse valve bushing	1	39	Exhaust board	1
4	Bushing	1	16	Cylinder	1	28	Spring	1	40	Air inlet	1
5	O-ring	1	17	Cylinder pin	1	29	Iron ball	1	41	Filter	1
6	Retainer ring	1	18	Rotor	1	30	Spring washer	4	42	Connector	1
7	Anvil	1	19	Rotor blade	6	31	Screw	4	43	Pin	1
8	Hammer cage	1	20	Rear end plate	1	32	Trigger	1	44	Muffler	1
9	Hammer	2	21	Rear bearing	1	33	Trigger pin	1	45	Ball	1
10	Hammer pin	2	22	Back cover gasket	1	34	Throttle valve seat	1	46	Spring	1
11	Cover gasket	1	23	Back cover	1	35	Pin	1	47	Screw	1
12	Rear washer	1	24	Pin	1	36	Valve stem	1			