


CN130

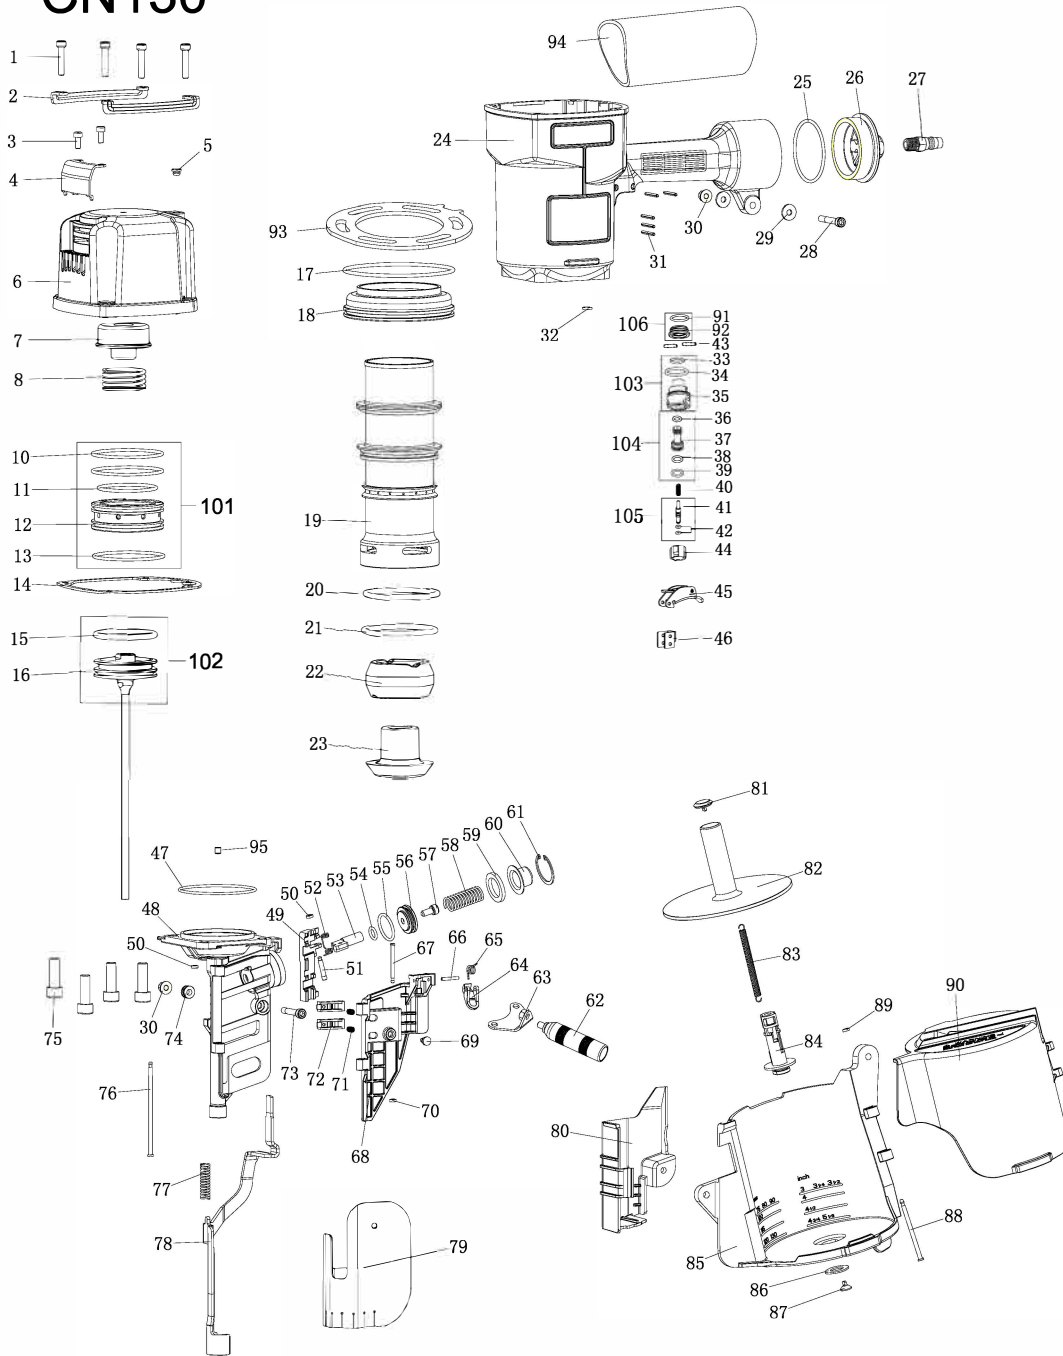

ITEM	PART NO.	PART NAME	Q' TY	ITEM	PART NO.	PART NAME	Q' TY
1	B01-01-060350-02	SCREW	4	52	AA57A-010A	SPRING	1
2	AA57B-014A	PROTECTOR	2	53	AA71A-005A	PISTON STAFF	1
3	B01-01-050120-02	SCREW	2	54	B08-009800210	O-RING	1
4	AA57B-009A	EXHAUST COVER	1	55	B08-025070262	O-RING	1
5	AA57B-028A	DUST COVER	1	56	AA57A-026A	PISTON	1
6	AA57B-Y12A1	CYLINDER CAP	1	57	B01-01-060160-02	SCREW	1
7	AA57B-006A	AIRPROOF CUSHION	1	58	AA57A-031A	SPRING	1
8	AA57B-013A	SPRING	1	59	AA57A-029A	FEED PISTON STOP	1
10	B08-069000300	O-RING	2	60	AA57A-030A	FEED PISTON BAFFLE	1
11	B08-056500310	O-RING	1	61	B03-05-0320-02	CTRCLIP	1
12	AA57B-010A	ACTIVE VALVE	1	62	AA57B-008A	GRIPPE	1
13	B08-065000355	O-RING	1	63	AA57B-Y11A1	GRIPPE LINKER	1
14	AA57B-007A	SHIM	1	64	AA57B-021A	DOORLATCH	1
15	B08-056600570	O-RING	1	65	AA57B-029A	SPRING	1
16	AA71A-Y03A1	DRIVER	1	66	B02-030200-02	SPRING PIN	1
17	B08-107540353	O-RING	1	67	AA57B-027A	PIN	1
18	AA62A-016A	CYLINDER RETAINER	1	68	AA71A-003A	DOOR	1
19	AA62A-003A	CYLINDER	1	69	AA40A-035A	DUST COVER HOOK	1
20	B08-074400310	O-RING	1	70	AA40A-054A	RUBBER JACKER	1
21	B08-069000530	O-RING	1	71	AA40A-055A	SPRING	2
22	AA57B-018A	BUMPER I	1	72	AA42A-028A	CHECK PAWL	2
23	AA57B-017A	BUMPER II	1	73	B01-01-060350-02	SCREW	1
24	AA62A-001A	BODY	1	74	AA40A-050A	CUSHION	1
25	B08-057000300	O-RING	1	75	B01-01-100300-02	SCREW	4
26	AA76A-023A	TAIL CAP	1	76	AA57B-023A	PIN	1
27	AK01A-023A	AIR PLUG	1	77	AA71A-010A	SPRING	1
28	B01-01-060400-02	SCREW	1	78	AA71A-013A	SAFETY	1
29	AA40A-056A	FLAT WASHER	2	79	AA71A-016A	DUST COVER	1
30	B07-01-060-00	LOCKNUT	2	80	AA71A-014A	MUZZLE COVER	1
31	B02-030250-02	ROLL PIN	5	81	AA71A-017A	RECEIVER SPRING	1
32	B08-006900180	O-RING	1	82	AA71A-008A	MAIL SUPPORT	1
33	B08-011800180	O-RING	1	83	AA71A-012A	TENSION POST	1
34	B08-019600240	O-RING	1	84	AA71A-009A	MAGAZINE POST	1
35	AA42A-042A	VALVE	1	85	AA71A-006A	MAGAZINE	1
36	B08-005800190	O-RING	1	86	AA40A-048A	POST RETAINER	1
37	AA17D-006A	VALVE PISTON	1	87	AA40A-046A	RECEIVER SPRING	1
38	B08-006800190	O-RING	1	88	AA71A-011A	MAGAZINE PIN	1
39	B08-008800190	O-RING	1	89	AA40A-054A	RUBBER JACKER	1
40	AA40A-062A	SPRING	1	90	AA71A-007A	MAGAZINE COVER	1
41	AA17D-007A	THIMBLE	1	91	B08-016000180	O-RING	1
42	B08-002500140	O-RING	2	92	AA40A-039A	TRIGGER COVER	1
43	AA42A-043A	TRIGGER PIN	2	93	AA71A-007A	SHIM	1
44	AA42A-041A	THIMBLE COVER	1	94	GG08A	JACKER	1
45	AA40A-Y14A1	TRIGGER SET	1	95	B01-04-050050-02	SCREW	1
46	AA42A-019A	SAFETY LIMITR	1	101	AA57B-Y02A1	ACTIVE VALVE SET	
47	B08-076000250	O-RING	1	102	AA71A-Y04A1	DRIVER SET	
48	AA71A-001A	MUZZLE	1	103	AA42A-Y14A1	VALVE SET	
49	AA71A-004A	FEED PAWL	1	104	AA17D-Y05A1	VALVE PISTON SET	
50	AA40A-051A	RUBBER JACKER	1	105	AA17D-Y06A1	THIMBLE SET	
51	AA40A-032A	PIN	1	106	AA40A-Y15A1	VALVE SET	